


# ITEM NO. :T3225BU-BK-C

## Installation Process Without a Junction Box

### ASSEMBLY INSTRUCTIONS

1. Mark the mounting holes on the wall according to the hole spacing of a mounting plate and drill holes on the wall (A).
2. Gently tap the plastic drywall anchors (B) into the hole with a hammer.
3. Install the mounting plate (C) on the outlet box with the screws (D).
4. Pass the power cords (E) through the hole on the canopy, adjust the length of cords, and fasten the cords with an 8-shaped fastener.
5. Connecting the power cords (F): connect the black wire with black wire and white wire with white wire with the wire nuts. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
6. Wrap a few loops of the ground wire (G) around the green screw on the mounting plate (C) and then tighten the green screw.
7. Fix the canopy (H) to the mounting plate (C) with the ball nuts (J).
8. Screw the bulb (K) into the lamp holder.

*Please consult a qualified Electrician if you are not familiar with electrical wiring.*

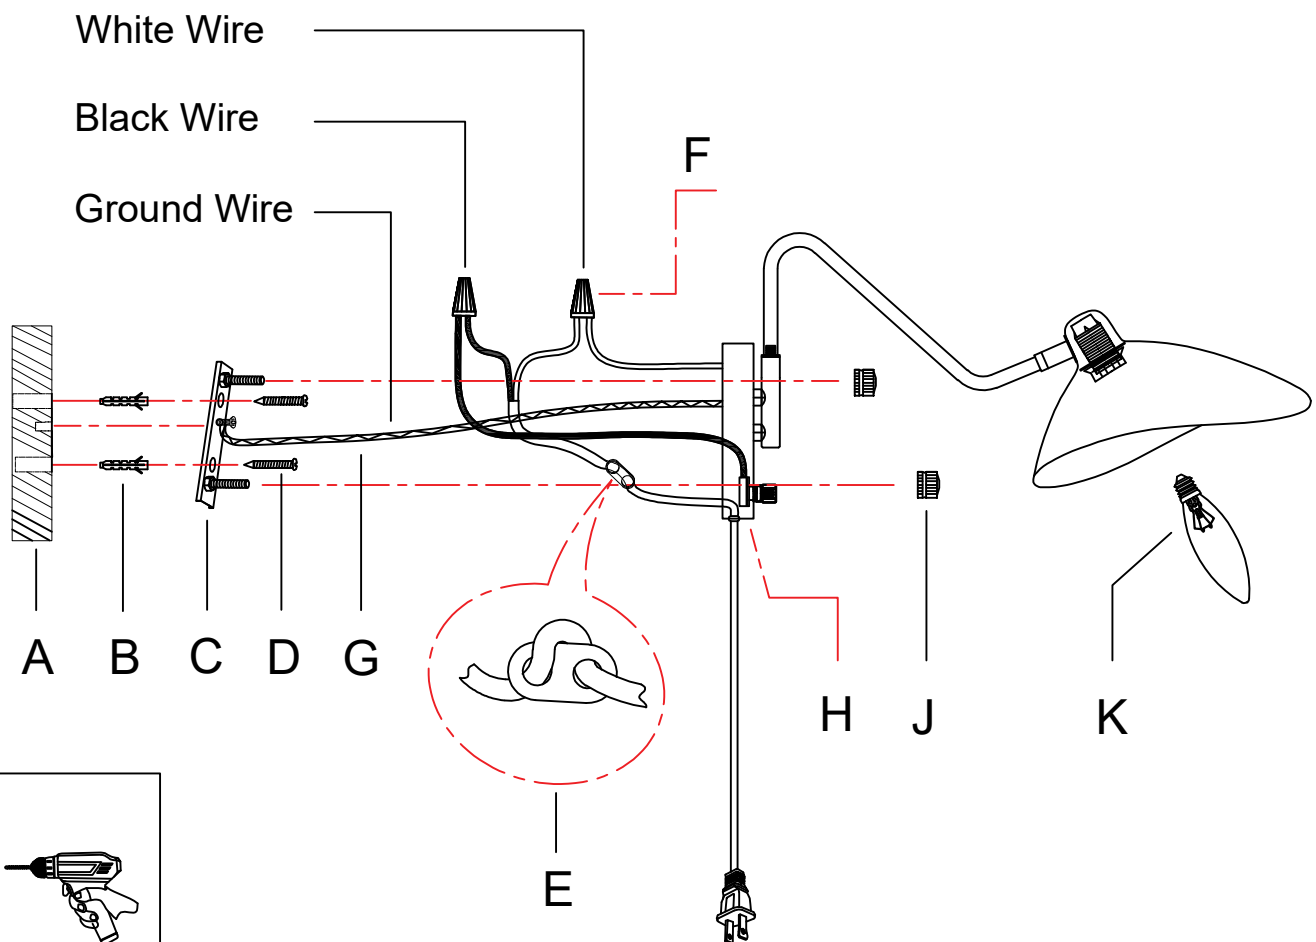

White Wire

Black Wire

Ground Wire

F

A

B

C

D

G

E

H

J

K

(A)

(B)