


# ITEM NO. :T3041BU-J-C

## ASSEMBLY INSTRUCTIONS

- 1.Install the mounting plate (A) on the outlet box by using the screws (B).
- 2.Loosen the hex nuts around the bolts (C) and screw in or unscrew the bolts from the junction box to get the right length for installation.
- 3.Connect the fixture wire to the circuit wire by wire nuts (D), black wire with live wire, white wire with neutral wire, ground wire with ground wire.
- 4.Fix the lamp body (E) to the mounting plate (A) by the ball nuts (F).
- 5.Place the lamp shade (G) on the socket and tighten it with the socket ring (H).
- 6.Screw the bulb (J) into the lamp holder.


*Please consult a qualified Electrician if you are not familiar with electrical wiring.*

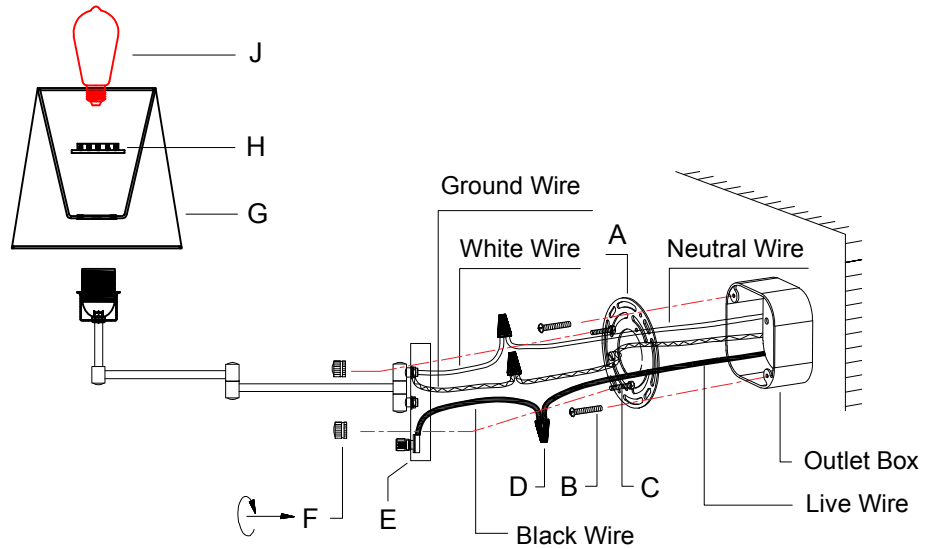

### Installation Process With a Junction Box

#### Installation Process Without a Junction Box

- 1.Drill holes on the wall according to size of drywall anchors and gently tap the plastic drywall anchors (A) into the hole with a hammer.
- 2.Align the holes on the mounting plate with those on the wall. Drill a deep hole for the green screw securing the ground wire (E).
- 3.Attach the the mounting plate (B) to the wall and secure it with self-tapping screws (C).
- 4.Wrap a few loops of the ground wire (E) around the green screw tightly.
- 5.Pass the power cord (D) through the hole on the canopy and fasten the cord with an 8-shaped fastener. Connect the fixture wire to the circuit wire with wire nuts, black wire with live wire (L) and white wire with neutral wire (N).

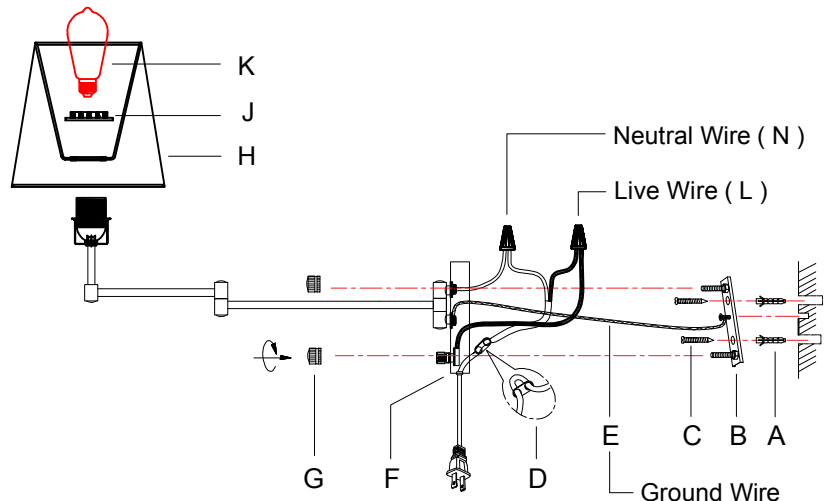

Note: The way to differ the neutral wire from the live wire is that a white line is printed on the cover of the neutral wire .