


ITEM NO. : T7287-2CU

ASSEMBLY INSTRUCTIONS

1. Install the mounting plate (A) on the outlet box with the screws (B).
2. Loosen the hex nuts around the bolts (C) and screw in or unscrew the bolts from the junction box to get the right length for installation.
3. Connect the fixture wire to the circuit wire with the wire nuts (D): black wire with live wire, white wire with neutral wire, ground wire with ground wire. Turn the wire nuts to twist the wires together. Wrap the wire nuts with insulated rubber tape.
4. Fix the lamp body (E) to the mounting plate (A) with the ball nuts (F).
5. Screw the connecting rod (G) into the joint nut on the lamp body (E).
6. Screw the bulb (H) into the lamp holder.
7. Put the glass sheet (J), the silicone spacer (K), and the iron spacer (L) around the connecting rod (G) one by one in order. The glass sheet should be placed at the bottom of the lampshade. Secure the glass sheet with the hex nut (M) and the nut cover (N).

Please consult a qualified Electrician if you are not familiar with electrical wiring.

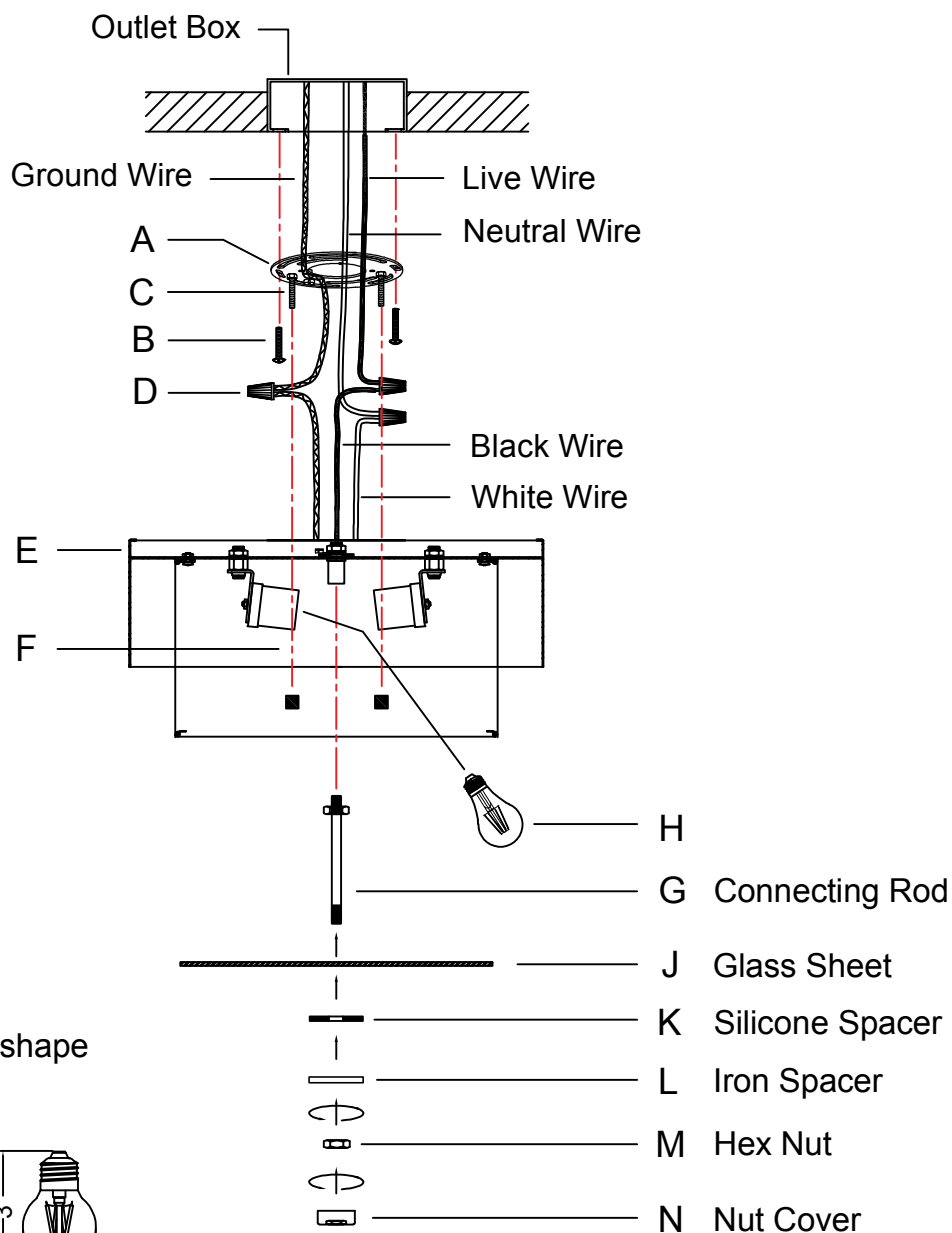

Recommended bulb shape

